

Pioneer Dj

Multi Player Series

 
DJ Controller Hardware Diagram

Using a DJ controller

If you use a USB cable to connect a DJ Player and a DJ controller, you can use the DJ controller to control some of the performance functions of the DJ Player.


Furthermore, one DJ controller can be used to control up to four players connected with PRO DJ LINK.

* Only players that support connecting a DJ controller can be controlled.

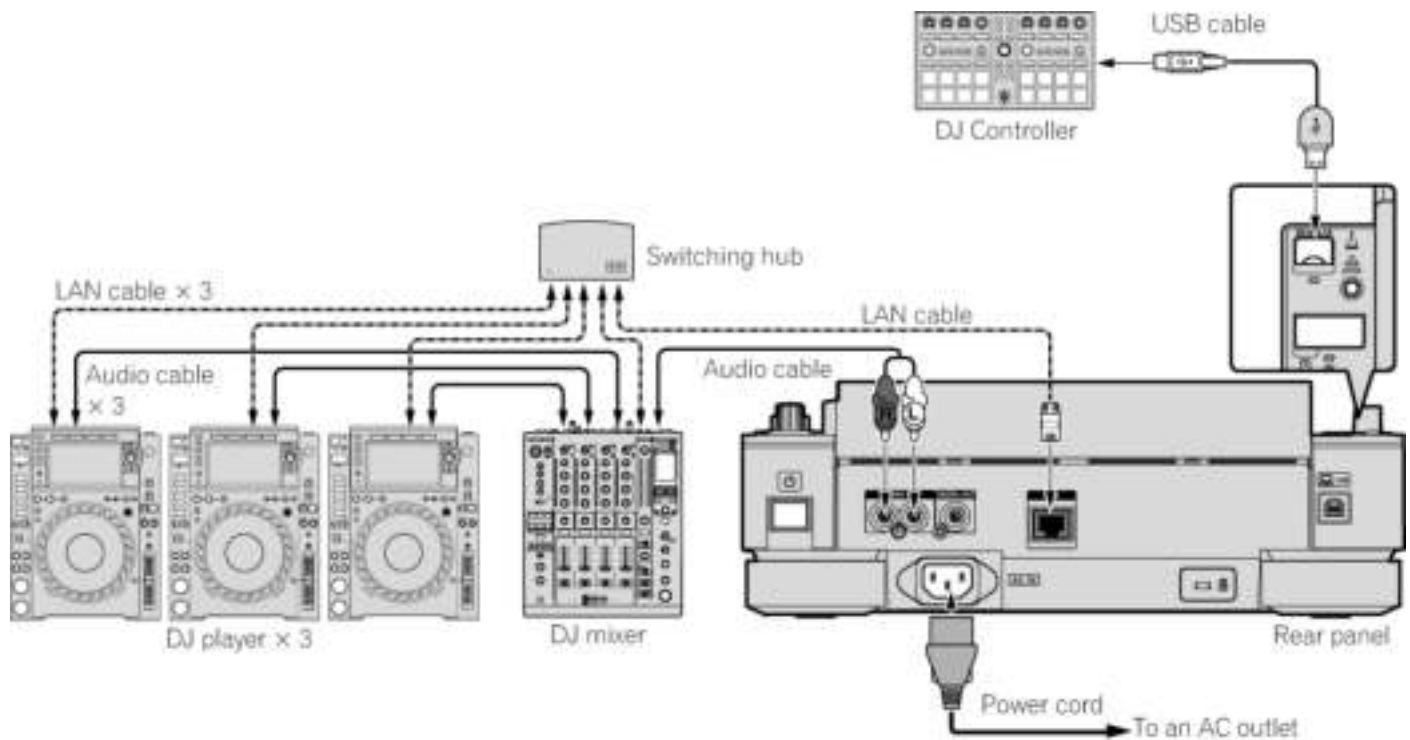

Switching the player to use

 Description of the screen

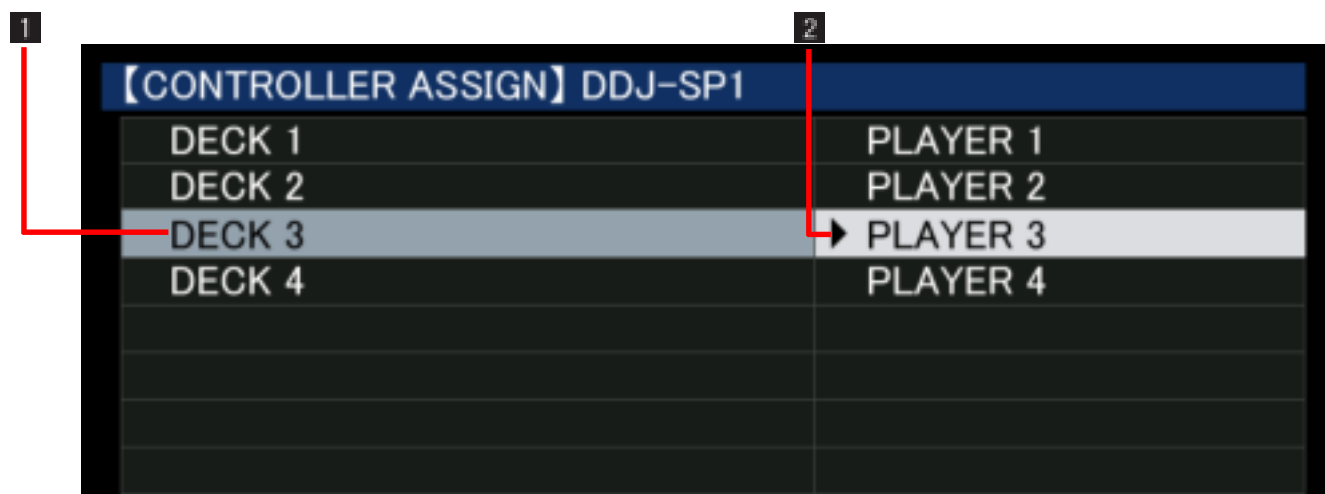

- 1** Deck number of the DJ controller
- 2** Player number

Changing the player you wish to control

1 Connect players and a DJ controller using USB cables.

2 Press the [USB] button on the player connected to the DJ controller.

The [CONTROLLER ASSIGN] screen is displayed.

3 Use the rotary selector to select the deck number of the DJ controller you wish to control.

4 Set the cursor to the deck number you wish to change, then press the rotary selector.

The cursor moves to the player section.

 
5 Turn the rotary selector and change the player.

6 Press the rotary selector to select the player.

The cursor returns to the deck section.

When the [BACK] button is pressed before selecting the player, the change is aborted.

DDJ-SP1 Hardware Diagram

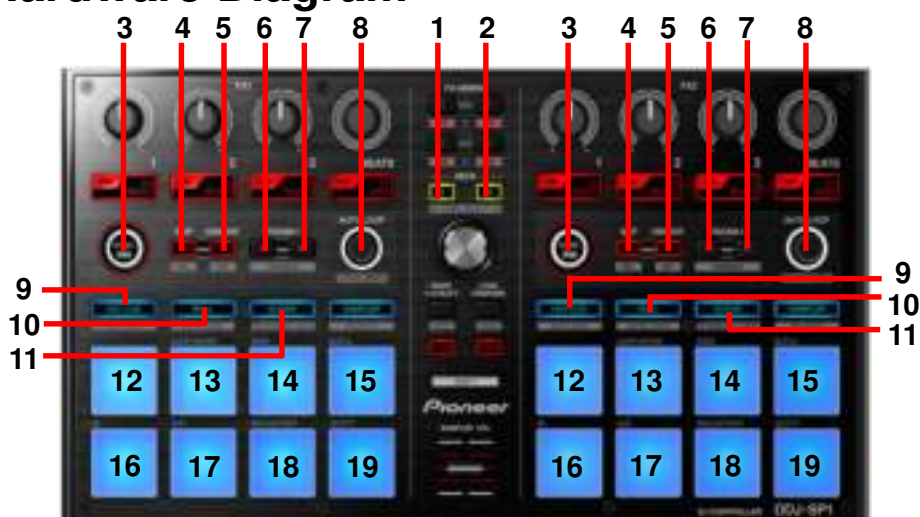

No.	Name	Function	(+SHIFT)
1	DECK 3	Switch Player 1/3	-
2	DECK 4	Switch Player 2/4	-
3	SYNC	SYNC (Press and hold) INSTANT DOUBLES	MASTER
4	SLIP	SLIP	QUANTIZE
5	CENSOR	SLIP REVERSE	-
6	PARAM.1 [<]	LOOP CUTTER	-
7	PARAM.1 [>]	LOOP DOUBLE	-
8	AUTO LOOP	LOOP CUTTER / DOUBLE 4 BEAT LOOP / LOOP EXIT	-
No. 9 HOT CUE MODE			
12	PAD 1	Set/Play Hot Cue A	Delete Hot Cue A
13	PAD 2	Set/Play Hot Cue B	Delete Hot Cue B
14	PAD 3	Set/Play Hot Cue C	Delete Hot Cue C
15	PAD 4	Set/Play Hot Cue D	Delete Hot Cue D
16	PAD 5	Set/Play Hot Cue E	Delete Hot Cue E
17	PAD 6	Set/Play Hot Cue F	Delete Hot Cue F
18	PAD 7	Set/Play Hot Cue G	Delete Hot Cue G
19	PAD 8	Set/Play Hot Cue H	Delete Hot Cue H
No. 10 ROLL MODE		AUTO BEAT LOOP	SLIP BEAT LOOP
12	PAD 1	1/4 beat	1/16 beat
13	PAD 2	1/2 beat	1/8 beat
14	PAD 3	1 beat	1/4 beat
15	PAD 4	2 beats	1/2 beat
16	PAD 5	4 beats	1 beat
17	PAD 6	8 beats	2 beats
18	PAD 7	16 beats	1/3 beat
19	PAD 8	32 beats	3/4 beat

No. 11 BEAT JUMP MODE			
12	PAD 1	1 beat (REV)	16 beats (REV) *
13	PAD 2	1 beat (FWD)	16 beats (FWD) *
14	PAD 3	2 beats (REV)	-
15	PAD 4	2 beats (FWD)	-
16	PAD 5	4 beats (REV)	-
17	PAD 6	4 beats (FWD)	-
18	PAD 7	8 beats (REV) *	-
19	PAD 8	8 beats (FWD) *	-

* XDJ-1000MK2 is not supported.

© 2016 Pioneer DJ Corporation. All rights reserved.